

## NHQ x0xx\_AIO

# Precision NIM High Voltage Supply NHQ STANDARD series

## RS232 Interface

### Operators Manual

#### Contents:

1. General information
2. Technical Data
3. NHQ Description
4. Front panel
5. Handling
6. RS232 Interface
7. Program example
8. CE Certificate

Appendix A: Block diagram

Appendix B: Rotary switch locations

#### Attention!

-It is not allowed to use the unit if the covers have been removed.

-We decline all responsibility for damages and injuries caused by an improper use of the module. It is highly recommended to read the operators manual before any kind of operation.

#### Note

The information in this manual is subject to change without notice. We take no responsibility for any error in the document. We reserve the right to make changes in the product design without reservation and without notification to the users.

Filename NHQx0x\_AIO\_01\_FAST.\_\_\_\_; Version 2.04 as of 06.04.98






## 1. General information

The NHQ x0xx\_AIO is a one or two channel NIM High Voltage PS. The unit is 1 slot wide and offers either manual control and remote control via RS232 Interface or analogue I/O. Remote control is also optionally available via the CAN-Bus interface according to the CAN specification 2.0 A. The use of remote control interfaces extended functionality compared to manual control.

The high voltage supply provides high precision output voltage together with very low ripple and noise even under full load. Separate 10%-steps hardware switches set voltage and current limits. An INHIBIT input protects sensitive devices which are connected to the output. The maximal output current per channel is also programmable via the interface. The high voltage output is protected against overload and short circuit. The output polarity can be switched. The HV-GND is connected to the chassis and the powering GND.

## 2. Technical Data

NHQ - one channel - two channel	102M_AIO 202M_AIO	103M_AIO 203M_AIO	104M_AIO 204M_AIO	105M_AIO 205M_AIO	106L_AIO 206L_AIO
Output voltage $V_{out}$	0 .. 2 kV	0 ... 3 kV	0 ... 4 kV	0 ... 5 kV	0 ... 6 kV
Output current $I_{out}$	0 ... 6 mA	0 ... 4 mA	0 ... 3 mA	0 ... 2 mA	0 ... 1 mA
	with <b>option 104 ( M <math>\Rightarrow</math> L):</b> max 100 $\mu$ A				
Ripple and noise	typ. < 0,5 mV <sub>pp</sub>	< 2 mV <sub>pp</sub>	< 1 mV <sub>pp</sub>	< 2 mV <sub>pp</sub>	< 2 mV <sub>pp</sub>
	max. 2 mV <sub>pp</sub>	4 mV <sub>pp</sub>	2 mV <sub>pp</sub>	5 mV <sub>pp</sub>	5 mV <sub>pp</sub>
LCD Display	4 digits with sign, switch controlled -voltage display in [V], -current display in [ $\mu$ A]				
Resolution of voltage measurement	1 V				
current measurement	1 $\mu$ A, with <b>option 104:</b> 100 nA at $I_{out\ max} \leq 100 \mu$ A				
Accuracy	$\pm (0,05\% V_{out} + 0,02\% V_{out\ max} + 1\ \text{digit})$ for one year				
	$\pm (0,05\% I_{out} + 0,02\% I_{out\ max} + 1\ \text{digit})$ for one year				
Stability	$\Delta V_{out} / V_{INPUT} < 5 * 10^{-5}$				
	$\Delta V_{out} < 5 * 10^{-5}$ (idle to max. load)				
Temperature coefficient	$< 5 * 10^{-5}/K$				
Voltage control	CONTROL switch in: upper position - manual: 10-turn potentiometer, lower position - DAC: control via interface (ex works) internal switchable to control via analogue I/O (extDAC) NHQ x02_AIO – x04_AIO: $V_{SET/MON} = V_{OUT} / 400$ NHQ x05_AIO – x06_AIO: $V_{SET/MON} = V_{OUT} / 1000$ Please use all channels via interface or analogue I/O always!				
Rate of change of Output voltage	- HV -ON/OFF (hardware ramp): 500 V/s - control via interface (software ramp): 2 - 255 V/s				
Protection	- separate current and voltage limit (hardware, rotary switch in 10%-steps), - INHIBIT (external signal, TTL-level, Low active), - programmable current limit (software)				
Power requirements $V_{INPUT}$	$\pm 24\ V$ (< 800 mA, one channel < 400 mA), $\pm 6\ V$ (< 100 mA), with <b>option N24:</b> only $\pm 24\ V$				
Operating temperature	0 ... 50 °C				
Storage temperature	-20 ... +60 °C				

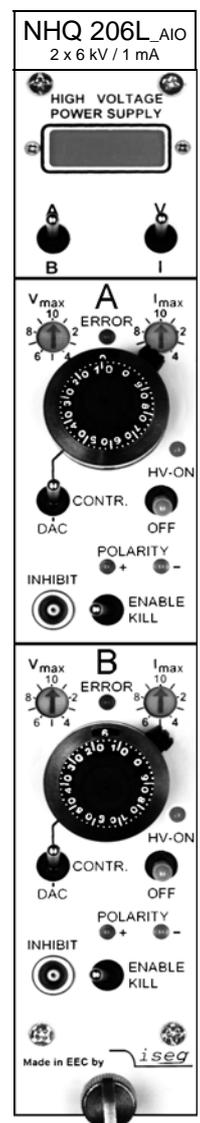

NHQ - one channel	102M_AIO	103M_AIO	104M_AIO	105M_AIO	106L_AIO
- two channel	202M_AIO	203M_AIO	204M_AIO	205M_AIO	206L_AIO
Packing	NIM Standard chassis: NIM 1/12				
Connector	NIM: 5-pin; Interface: 9-pin female D-Sub analogue I/O: $V_{SET}$ 1-pin Lemo-hub on rear side $V_{MON}$ 1-pin Lemo-hub on rear side				
HV connector	SHV-Connector on rear side, <b>optional</b> Radial connector R316 553				
INHIBIT connector	1-pin Lemo-hub on front side				

### 3. NHQ Description

The function is described in a block diagram of the NHQ xxx , see Appendix A.

#### High voltage supply

A patented high efficiency resonance converter circuit, which provides a low harmonic sine voltage on the HV-transformer, is used to generate the high voltage. The high voltage is rectified by using a high speed HV-rectifier, and the polarity is selected via a high-voltage switch. A consecutive active HV-filter damps the remaining distortion and ensures low ripple and noise values as well as the stability of the output voltage. A precision voltage divider is integrated into the HV-filter to provide the set value of the output voltage, an additional voltage divider provides the measuring signal for the maximum voltage control. A precision 'Measuring and AGC amplifier' compares the actual output voltage with the set value given by the DAC (computer control) or the ten turn pot (manual control). Signals for the control of the resonance converter and the stabiliser circuit are derived from the result of the comparison. The two-stage layout of the control circuit results in an output voltage, stabilised to very high precision to the set point.

Separate security circuits prevent that the front-panel switch settings for the current  $I_{max}$  and voltage  $V_{max}$  limits could be exceeded. A monitoring circuit prevents malfunction caused by low supply voltage.

The internal error-detection-logic evaluates the corresponding error signals and the external INHIBIT signal. It also allows the detection of short-over-current due to single flashover.

#### Digital control unit


A micro controller handles the internal control, evaluation and calibration functions for both channels. The actual voltages and currents are read cyclically by an ADC, connected by a multiplexer and processed to be displayed on the 4 digit LCD. The current and voltage hardware limits are retrieved cyclically several times per second. The reference voltage source provides a precise voltage reference for the ADC and generates the control signals in the manual operation mode.

In remote control the set values for the corresponding channels are generated by a 16-Bit DAC.

#### Filter

A special quality of the unit is a tuned filtering concept, which prevents the unit against electromagnetic interference and also the irradiation of the module to the outside world. A filtering network is located close to the connectors of the supply voltage and the converter circuits of the individual devices are also protected by filters. The high-voltage filters are housed in individual metal enclosures to shield even against minimum irradiation.

## 4. Front panel

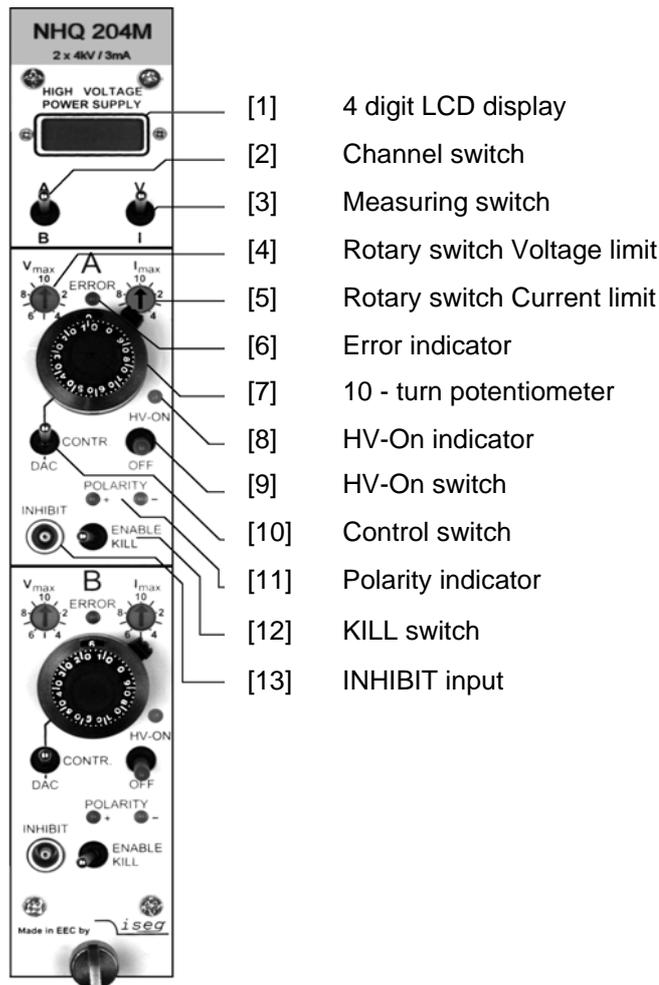

## 5. Handling

The NIM connector, the Sub-D-9 connector for the interface and the SHV High voltage output connector is on the rear side of the unit.

The output polarity is selected with help of the rotary switch on the cover side (see appendix B). The chosen polarity is displayed on the LED [11] on the front panel and also as a sign on the LCD display [1].

**Attention!** It is not allowed to change the polarity under power!

An undefined switch setting (not at one of the end positions) will cause no output voltage.

The High Voltage output is switched to on with HV-ON switch [9] at the front panel. The yellow LED [8] is flashing if the units works well.

**Attention!** If the CONTROL switch [10] is in upper position (manual control), the high voltage is generated at the HV-output connector on the rear side with a ramp speed of 500 V/s (hardware ramp) to the set voltage chosen via the 10-turn potentiometer [7]. This is also the same, if the unit is switched from interface control to manual control.

If the CONTROL switch [10] is in lower position (DAC) the high voltage will be activated only after receiving corresponding interface commands if control via digital interface is active (internal switch to intDAC on all channels).

**Attention!** If the 'Autostart' mode has been activated during the most recent operation then the output voltage will be generated following the herewith stored parameters.

If control via analogue I/O is active (internal switch to extDAC on all channels), high voltage will be activated only corresponding to the analogue set voltage  $V_{SET}$ .

Output voltage in [V] or output current in [ $\mu$ A] will be displayed on the LCD [1] depending on the position of the Measuring switch [3].

Channel switch [2] is to select which channel will be displayed, channel (A) or channel (B).

During manual control (CONTROL switch [10] to potentiometer), the output voltage can be set via the 10-turn potentiometer [7] in a range of 0 to the maximum voltage.

If CONTROL switch [10] is switched to DAC, the DAC takes over the previous output voltage setting of the manual control. Via the interface the output voltage can be generated under a programmable ramp speed (software ramp) of 2 to 255 V/s in a voltage range of 0 to the maximum voltage.

A programmable current trip for the maximum allowed output current per channel can be set with the maximum possible resolution of the current measurement. If the output current exceeds the programmed limit, the output voltage will be shut off permanently by the software. Restart the voltage is possible after "Read status word" and then "Start voltage change" via serial interface. If "Auto start" is active, "Start voltage change" is not necessary.

The maximum output voltage and current can be selected in 10%-steps with the rotary switches  $V_{max}$  [4] and  $I_{max}$  [5] (switch dialled to 10 corresponds to 100%) independently of programmable current trip. The case where the output voltage or current will exceed the limits will be displayed by the red error LED on the front panel [6].

Function of the KILL switch [12]:

Switch to the right position: (ENABLE KILL) The output voltage will be shut off permanently without ramp on exceeding  $I_{max}$  or in the presence of an INHIBIT signal (Low=active) on the INHIBIT input [13]. The restart of the output voltage is possible after using the switches HV-ON [9] or KILL [12] or during remote control "Read status word" and then "Start voltage change". If "Auto start" is active, "Start voltage change" is not necessary.

Note: If any capacitance is connected to the HV-output or if the rate of change of the output voltage is high (hardware ramp) at high load, then the KILL function will be released due to the current which is charging this capacitor. In this case a slower rate of output change (software ramp) is recommended or ENABLE KILL should not be selected before the output voltage has arrived the set voltage.

Switch to the left position: (DISABLE KILL) The output voltage will be limited to  $V_{max}$ , and the output current to  $I_{max}$  .; INHIBIT shuts the output voltage off without ramp. The previous voltage setting will be reset together with hard or software ramp if INHIBIT is no longer present.

## 6. RS232 interface

The most important parameters of the high voltage supply can be set and read under computer control via the RS232 interface with internal switch to intDAC on all channels

### RS232 control mode

- 1<sup>st</sup> Write function: set voltage; ramp speed; maximal output current (current trip); auto start
- 2<sup>nd</sup> Switch function: output voltage = set voltage, output voltage = 0
- 3<sup>rd</sup> Read function: set voltage; actual output voltage; ramp speed; actual output current; current trip; auto start ; hardware limits current and voltage; status

Front panel switches i.e. manual control is on higher priority compared to software control.

### Manual control mode

During manual control , RS232 read cycles are interpreted only. Commands are accepted, but do not result into a change of the output voltage.

## Specification RS232 interface

The data exchange is character based, synchronisation between the computer and the unit interface input is performed by using echo. The data transfer to the computer (output) is asynchronous, breaks between two characters and the programming of the break time allows the computer to receive and evaluate the incoming data. Break time has been set to 3 ms at the factory.

The hardware setting of the RS232 interface is 9600 bit/s, 8 bit/character, no parity, 1 stop bit.

Signal transmission is performed indirect coupled via the RxD and TxD, relative to GND.

The interface is on a 9 pin female D-Sub connector, the connection can be set up using a 1:1 extension cord (no null modem cable) if a PC is connected. The pin assignment is given in table 1. Control signals which should be bridged on the PC side if a three-conductor cable is used, are given in table 1 .

Table 1:

Signal RS 232	HV-supply DSUB9	Int.	PC DSUB9	PC DSUB25	Connection 3-lead cable
RxD	2		2	3	
TxD	3		3	2	
GND	5		5	7	
	4	⌋	4	20	⌋
	6	⌋	6	6	⌋
	8	⌋	8	5	⌋

## Syntax

The commands are transmitted in ASCII. The end of command is formed by the sequence <CR> <LF> (0x0D 0x0A , 13 10 respectively). Leading zeroes can be omitted on input, output is in fixed format.

At first a <CR><LF> has to be sent in order to synchronise the computer and the unit.

## Command set

command	Computer	HV-supply
Read module identifier	# *	# * nnnnnn ; n.nn ; U ; I * (unit number ; software-rel. ; V <sub>out max</sub> ; I <sub>out max</sub> )
Read break time	W *	W * nnn * (break time 0 ... 255 ms)
Write break time	W=nnn *	W=nnn ** (break time = 0 - 255 ms)
Read actual voltage channel 1	U1 *	U1 * {polarity / voltage} * (in V)
Read actual current channel 1	I1 *	I1 * {mantisse / exp. with sign} * (in A)
Read voltage limit channel 1	M1 *	M1 * nnn * (in % of V <sub>out max</sub> )
Read current limit channel 1	N1 *	N1 * nnn * (in % of I <sub>out max</sub> )
Read set voltage channel 1	D1 *	D1 * {voltage} * (in V)
Write set voltage channel 1	D1=nnnn *	D1=nnnn ** (voltage in V; <M1)
Read ramp speed channel 1	V1 *	V1 * nnn * (2 ... 255 V/s)
Write ramp speed channel 1	V1=nnn *	V1=nnn ** (ramp speed = 2 - 255 V/s)
Start voltage change channel 1	G1 *	G1 * S1=xxx * (S1 , ⇒ Status information)
Write current trip channel 1	L1=nnnn *	L1=nnnn ** (corresponding current resolution > 0)
Read current trip channel 1	L1 *	L1 * nnnn * (s.a., for nnnn=0 ⇒ no current trip)
Read status word channel 1	S1 *	S1 * xxx * (S1 , ⇒ Status information)
Read module status channel 1	T1 *	T1 * nnn * (code 0...255, ⇒ Module status)
Write auto start channel 1	A1=nn *	A1=nn ** (conditions ⇒ Auto start)
Read auto start channel 1	A1 *	A1 * n * (8 ⇒ auto start is active; 0 ⇒ inactive)

\* = <CR><LF>

The second channel of the supply is addressed by replacing 1 with 2 !

## Status information:

xxx:	ON<SP>	Output voltage according to set voltage
	OFF	Channel front panel switch off
	MAN	Channel is on, set to manual mode
	ERR	$V_{max}$ or $I_{max}$ is / was exceeded
	INH	Inhibit signal was / is active
	QUA	Quality of output voltage not guaranteed at present
	L2H	Output voltage increasing
	H2L	Output voltage decreasing
	LAS	Look at Status (only after G-command)
	TRP	Current trip was active

If the output voltage has been shut off permanently (by ERR or INH at ENABLE KILL or TRP) you must write "Read status word" before it is possible to restart the output voltage again.

## Error codes:

	????	Syntax error
	?WCN	Wrong channel number
	?TOT	Timeout error (with following re-initialisation)
	?<SP>UMAX=nnnn	Set voltage exceeds voltage limit

## Module status:

Status	Description		Bit	value	
QUA	Quality of output voltage not given at present		7=1	128	
ERR	$V_{max}$ or $I_{max}$ is / was exceeded		6=1	64	
INH	INHIBIT signal	was / is active	5=1	32	
		inactive		0	
KILL_ENA	KILL-ENABLE is	on	4=1	16	
		off		0	
OFF	Front panel HV-ON switch in	OFF position	3=1	8	
		ON position		0	
POL	Polarity set to	positive	2=1	4	
		negative		0	
MAN	Control	manual	1=1	2	
		via RS 232 interface		0	
T1:	U/I	Display dialled to	voltage measurement	0=1	1
			current measurement		0
T2:	A/B	Channel dialled to	channel A	0=1	1
			channel B		0

## Auto start:

Description	Bit	value
If the Auto start conditions ( status: OFF + ERR + INH + MAN = 0 ) are made then the output voltage of the channel is ramping to the set voltage, i.e. G-command is after D-command, POWER-ON and OFF $\Rightarrow$ ON not necessary.  If the output voltage has been shut off permanently because $V_{\max}$ or $I_{\max}$ has been exceeded or by ERR or INH ( ENABLE KILL or TRP), the previous voltage setting will be reset with software ramp after "Read status word".	3=1	8
values loaded into corresponding registers at POWER-ON!	Current trip saving in EEPROM	2=1 4
	Set voltage saving in EEPROM	1=1 2
	Ramp speed saving in EEPROM	0=1 1

(EEPROM guarantee 1 million saving cycles)

## Software

Contact us for an overview for our user friendly control and data acquisition software!

## 7. Program example

```
/*
nhq.cpp
example program for iseg nhq hv boards, written by Jens Römer, 27.2.97
this code was compiled under BC, please contact iseg for the source file
*/

#include <dos.h>
#include <stdio.h>
#include <conio.h>
#include <stdlib.h>
#include "int14.h" // COM2 handling

const etx= 0x03;
const f = 0x0a;
const cr = 0x0d;
unsigned char readU[]={ 'U','1',cr,lf,etx}; //read voltage
unsigned char sendU[]={ 'D','1','=','1','0',cr,lf,etx}; //set voltage to 10V
unsigned char *ptr;
unsigned char rby;
int i, cnt;
boolean ok;

void main(void)
{
clrscr();
COM2_init();
COM2_set(9600); // COM2: 9600 baud, 8 databits, no parity, 1 stopbit
ok=True_;
ptr=readU;
for (;;)
{
if (*ptr==etx) break;
COM2_send(*ptr); //send one byte
rby=COM2_read(); //read one byte
if (rby!=*(ptr++)) ok=False_; //compare sent with read data
else switch (rby)
{
case lf : printf("%c",lf); break;
case cr : printf("%c",cr); break;
default : printf("%c",rby); break;
}
if (ok==False_)
{
printf("No coincident read data found!");
exit(1);
}
}
cnt=8;
do
{
rby=COM2_read(); //read voltage data
switch (rby)
{
case lf : printf("%c",lf); break;
case cr : printf("%c",cr); break;
default : printf("%c",rby); break;
}
cnt--;
} while (cnt>=1);
}
```

---

**8. CE Certificate**

## ***Copy of CE - Certificate***

This is to certify that the manufacturer

***iseg Spezialelektronik GmbH***  
*Bautzner Landstr. 23*  
*D - 01454 Radeberg / Rossendorf*  
*Germany*


guaranties the compliance to the following:

*VDE 0843 Part 3 / 02.88*  
*VDE 0875 Part 11 / 07.92*  
*VDE 0877 Part 1 / 03.89*  
*EN 50082-2 / 02.96*  
*ENV 50140 / 02.95*  
*EN 61000 Part 4-2 / 03.96*  
*EN 61000 Part 4-4 / 03.96*  
*EN 61000 Part 4-6 / 04.97*  
*EN 61000 Part 4-8 / 05.94*

*for the precision high voltage power supplies*  
*of the NHQ STANDARD – Series.*

Rossendorf, dated 30.09.98



Signed for Dr. Frank Gleisberg  
Managing director

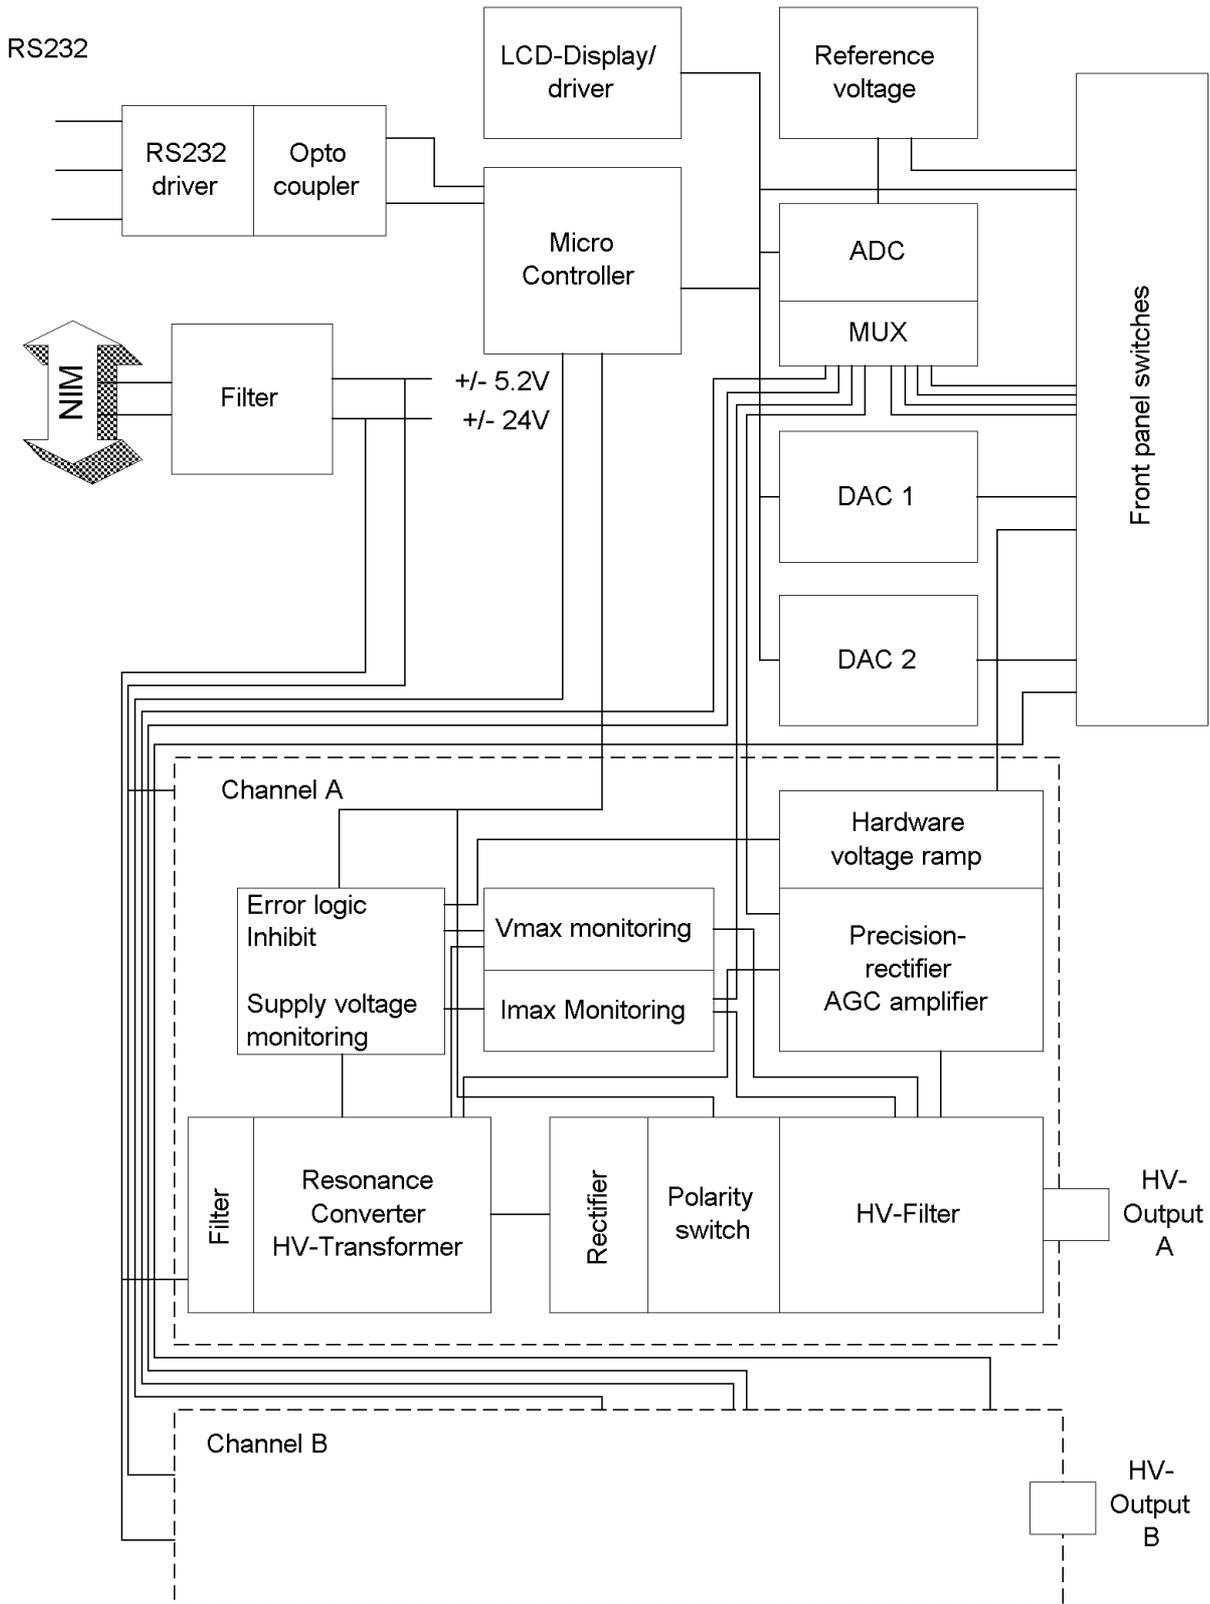

**Appendix A:** Block diagram NHQ



NHQ mit Voutmax bis zu 5kV /

NHQ with Voutmax up to 5kV

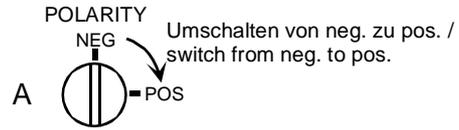

NHQ mit Voutmax > 5kV /

NHQ with Voutmax > 5kV

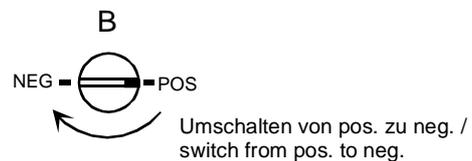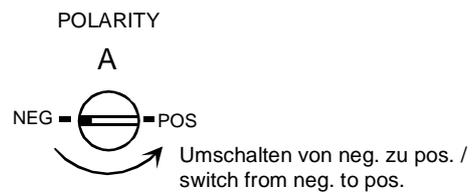

## Appendix B:

NHQ side cover,

Polarity rotary switch

e.g.:

channel A, polarity negative  
channel B, polarity positive